

Bray Commercial Division 13788 West Road, Suite 200A Houston, Texas 77041

BCDSales@Bray.com Phone: 1-888-412-2729 www.braycommercialdivision.com © 2022 Bray International, Inc. 11/19/24

D(M)S-70 Series -70 lb-in (8 Nm) Electric Actuator

IOM Manual



Table of Contents

D(M)S-70 Series - Installation, Operation and Maintenance Manual

Technical Specifications	3	
Application/Warnings	4	
Installation/Mounting	-9	
Wiring 1	0	
Dimensions	11	
FOR MORE INFORMATION ON THIS PRODUCT		

AND OTHER BRAY PRODUCTS PLEASE VISIT OUR WEBSITE - <u>www.braycommercialdivision.com</u>

Technical Specifications - D(M)S-70 Series Actuator						
		DS24-70-(A)	DS24-70-(A) DS24-70-T-(A) DMS24-70-(A)		DS120-70-(A)	
Type	Actuator Models	Spring Return On/Off with optional Auxiliary Switches (-A)	Spring ReturnSpring ReturnOn/Off & FloatingModulatingwith optional Auxiliarywith optional AuxiliarySwitches (-A)Switches (-A)		Spring Return On/Off with optional Auxiliary Switches (-A)	
	Torque		70 lb-in	70 lb-in. (8 Nm)		
	Operating Voltage	24 VAC (18 to 30 V) at 50/60 Hz 24 VDC (21.6 to 28.8 V)	24 VAC (19.2 to 28.8 V) at 50/60 Hz 24 VDC (21.6 to 28.8 V)		AC 120 V (102 to 132 V) at 60 Hz	
	Power Consumption	VAC - 6.1 VA Running, 1.2 VA Holding	VAC - 7.9 V 5.5 VA	0.05 A Running, 0.03 A Holding		
		VDC - 3.5 W Running, 0.5 W Holding	VDC - 3.5 W Running, 1.9 W Holding			
	Input Signal	N/A	N/A	0(2) to 10 VDC 0(4) to 20 mA (with 500- ohm Resistor)	N/A	
Electrical	Min. Transformer Size	7 VA per Actuator	8 VA per	Actuator	N/A	
	Control Input Impedance	N/A	3000 Ohms	100k Ohms, Current Input: 500 Ohms with Field Fur- nished 500 Ohm Resistor	N/A	
	Feedback Signal	N/A		DC 0 (2) to 10 V for De- sired Rotation Range up to 95°. Corresponds to Rota- tion Limits, 0.5 mA at 10 V Maximum	N/A	
	Auxiliary Switch Rating	(-A) Models) Two Single-Pole, Double-Throw (SPDT), Double-Insulated Switches with Gold over Silver Contacts: AC 24 V, 50 VA Pilot Duty			 (-A) Models) Two Single-Pole, Double-Throw (SPDT), Double-Insulated Switches with Gold over Silver Contacts: AC 120 V, 5.8 A Resistive, 1/4 hp, 275 VA Pilot Duty 	
	Equipment Rating	Class 2	or Safety Extra-Low Voltage	(SELV)	N/A	
	Electrical Connection	48 in. UL 758 Type AWM H	lalogen-Free Cable w/ 18 AWC	G (0.85 mm ²) Conductors & 0.	0.25 in. (6 mm) Ferrule Ends	
	Conduit Connections	Integral Connectors for 3/8 in. (10 mm) Flexible Metal Conduit				
	Manual Override	Manual Override Crank				
iration	Spring Return	Direction is Selectable with Mounting Position of Actuator: Actuator Side A is away from damper or valve: CCW Spring Return Actuator Side B is away from damper or valve: CW Spring Return				
ope	Rotation Range	Maximum Full Stroke: 95° - (Adjustable Stop: 35 to 95° Maximum Position (Modulating Only))				
	Electric Stall Detection	Protects from overload at all angles of rotation				

Те	Technical Specifications - D(M)S-70 Series Actuator - Continued					
		DS24-70-(A)	DS24-70-T-(A)	DMS24-70-(A)	DS120-70-(A)	
Type	Actuator Models	Spring Return On/Off with optional Auxiliary Switches (-A)	Spring Return On/Off & Floating with optional Auxiliary Switches (-A)	Spring Return Modulating with optional Auxiliary Switches (-A)	Spring Return On/Off with optional Auxiliary Switches (-A)	
Operation	Runtime for 90° of Rotation	Power On (Running) 55 to 71 Seconds for 0 to 70 Ib-in (8 N·m) Load, at All Operating Conditions 60 Seconds Nominal at Full Rated Load (0.25 rpm) Power Off (Spring Return- ing) 13 to 26 Seconds for 0 to 70 Ib-in (8 N·m) Load, at Room Temperature 21 Seconds Nominal at Full Rated Load, 39 Seconds Maximum with 70 Ib-in (8 N·m) Load at -4°F (-20°C) 108 Seconds Maximum with 53 Ib-in (6 N·m) Load at -40°F (-40°C)	Power On (Running) 150 Se Ib·in (8 N·m) Load, At A Power Off (Spring Running) Ib·in (8 N·m) Load, a 22 Seconds Nominal at Fu Maximum with 70 Ib·in (8 N	Power On (Running) 55 to 71 Seconds for 0 to 70 Ib-in (8 N·m) Load, at All Operating Conditions 60 Seconds Nominal at Full Rated Load (0.25 rpm) Power Off (Spring Return- ing) 13 to 26 Seconds for 0 to 70 Ib-in (8 N·m) Load, at Room Temperature 21 Seconds Nominal at Full Rated Load, 39 Seconds Maximum with 70 Ib-in (8 N·m) Load at -4°F (-20°C) 108 Seconds Maximum with 53 Ib-in (6 N·m) Load at -40°F (-40°C)		
	Cycle Life	60,000 Full Stroke Cycles with 70 lb in. (8 N m) Load, 1,500,000 Repositions with 70 lb in. (8 N m) Load				
	Mechanical Connections	Round Shafts - 5/16 to 5/8 in. (8 to 16 mm) Square Shafts - 1/4 to 1/2 in. (6 to 12 mm)				
	Enclosure	NEMA 2 (IP54) for all mounting orientations N/A				
	Ambient Conditions (Non-Condensing)	Operating — -40° to 140°F (-40° to 60°C); 90% RH Maximum, Non-condensing Storage — -40° to 185°F (-40° to 85°C); 95% RH Maximum, Non-condensing				
Environmental	Audible Noise Rating	Running — < 47 dBA at 70 Ib-in (8 N·m) Load, at a Distance of 39-13/32 in. (1 m) Holding — < 20 dBA at a Distance of 39-13/32 in. (1 m) Returning — <52 dBA	BA at 70 at a Dis- in. (1 m) dBA at 3/32 in. Holding — < 20 dBA at a Distance of 39-13/32 in. (1 m) 2 dBA (All at a Distance of 39-13/32 in. (1 m))		Running — < 47 dBA at 70 Ib-in (8 N·m) Load, at a Distance of 39-13/32 in. (1 m) Holding — < 20 dBA at a Distance of 39-13/32 in. (1 m) Returning — <52 dBA	
		at 70 lb·in. (8 N·m) Load - (All at a Distance of 39- 13/32 in. (1 m))			at 70 Ib·in. (8 N·m) Load - (All at a Distance of 39- 13/32 in. (1 m))	
	Dimensions	6.33" (L) x 3.90" (W) x 2.26" (H)				
	Weight	3.5 lb. (3.9 lb w/ Aux. Switches)			4.2 lb.	
Conditions	Agency Certifications	 UL LISTED, CCN XAPX, FIIE E27/34; to UL 60/30-1A: 2003-08, Ed. 3.1, Automatic Electrical Controls for and Similar Use; and UL 60730-2-14: Ed. 1, Part 2, Particular Requirements for Electric Actuator UL Listed, CCN XAPX7, File E27734; to UL 60730-1:02-CAN/CSA: July 2002, 3rd Ed., Automatic Electric for Household and Similar Use; and CSA C22.2 No. 24-93 Temperature Indicating and Regulating Equ CE Mark - This product is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC and Low Voltage Directive 2006/95/EC. 			ical Controls for Household Electric Actuators. utomatic Electrical Controls d Regulating Equipment evant provisions of the EMC EC.	
	Warranty	5 Years limited from time of shipment				

IMPORTANT: Do not install multiple DMS series actuators connected to the same mechanical load. Master-slave application of DMS or VAMS series actuators requires that each actuator be connected to independent loads.

Warning - These actuators are designed for use only in conjunction with operating controls. Where an operating control failure would result in personal injury and/or loss of property, it is the responsibility of the installer to add safety devices or alarm systems that protect against, and/or warn of, control failure.

To avoid excessive wear or drive time on the motor, use a controller and/or software that provides a time-out function to remove the signal at the end of rotation (stall).

Disclaimer - The performance specifications are nominal and conform to acceptable industry standards. For application at conditions beyond these specifications, consult the nearest Bray office. Bray controls shall not be liable for damages resulting from misapplication or misuse of its products.

Applications

The D(M)S24-70 Series On/Off, Modulating and Floating Point Electric Spring Return Actuators are direct-mount actuators that operate on AC/DC 24 V power. These bidirectional actuators do not require a damper linkage, and are easily installed on round shafts from 5/16 to 5/8 in.(8 to 16mm) or square shafts from 1/4 to 1/2 in.(6 to 12mm) using the standard shaft clamp included with the actuator. An optional Large Coupler Kit is available for round shafts from 1/2 to 3/4 in.(12 to19mm) or square shafts from 3/8 to 9/16 in.(10 to14mm).

A single D(M)S24-70 Series Electric Spring Return Actuator provides 70lb·in.(8N·m) running and spring return torque. Integral line voltage auxiliary switches, available only on the (-A) models, indicate end-stop position, or perform switching functions within the selected rotation range.

IMPORTANT:

Use this D(M)S24-70 Series Electric Spring Return Actuator only to control equipment under normal operating conditions. Where failure or malfunction of the electric actuator could lead to personal injury or property damage to the controlled equipment or other property, additional precautions must be designed into the control system. Incorporate and maintain other devices, such as supervisory or alarm systems or safety or limit controls, intended to warn of or protect against failure or malfunction of the electric actuator.

Parts Included

- One electric D(M)S24-70 Series actuator with 48 in. UL 758 Type AWM Halogen-Free Cable w/ 18 AWG (0.85 mm²) Conductors & 0.25 in. (6 mm) Ferrule Ends
- Adjustable stop kit
- Anti-rotation bracket with two No.M3.5 x 9.5 mm, pan-head, cross-recessed (Phillips), self-drilling and self-tapping screws
- Manual override crank with 3M[®] Dual Lock[®] adhesive-backed strip
- Two No.10-32x9/16 in. conduit connector screws

Special Tools Needed

- 10 mm wrench/socket
- Drill with Phillips bit, driver size 1

IMPORTANT:

Use this D(M)S24-70 Series Electric Spring Return Actuator only to control equipment under normal operating conditions. Where failure or malfunction of the electric actuator could lead to personal injury or property damage to the controlled equipment or other property, additional precautions must be designed into the control system. Incorporate and maintain other devices, such as supervisory or alarm systems or safety or limit controls, intended to warn of or protect against failure or malfunction of the electric actuator.

IMPORTANT:

Before specifying D(M)S24-70 Series Electric Spring Return Actuators for plenum applications, verify acceptance of exposed plastic materials in plenum areas with the local building authority. Building codes for plenum requirements vary by location. Some local building authorities accept compliance to U L 1995, Heating and Cooling Equipment, while others use different acceptance criteria

IMPORTANT:

Do not install or use this D(M)S24-70 Series Electric Spring Return Actuator in or near environments where corrosive substances or vapors could be present. Exposure of the electric actuator to corrosive environments may damage the internal components of the device, and will void the warranty.





Mounting Positions for Chilled Water and Condensing Atmosphere Applications

Installation:

The D(M)S24-70 Series Electric Spring Return Actuators mount directly to the surface in any convenient orientation using two No. M3.5 x 9.5 mm self-drilling sheet metal screws and the anti-rotation bracket (parts included with the actuator). No additional linkages or couplers are required. Electrical connections are color-coded and identified with numbers permanently marked on the actuator cable. A tag on the actuator cable identifies the electrical connections and wiring details are included on the actuator housing.

Mounting:

The D(M)S24-70 Series Electric Spring Return Actuators can be easily installed on dampers with round shafts from 5/16 to 5/8 in. (8 to 16mm) or square shafts from 1/4 to 1/2 in. (6 to 12mm) using the standard shaft coupler included with the actuator. An optional Large Shaft Coupler Kit adapts to larger shaft sizes. If the damper shaft extends less than 3.31 in.(84mm), see the Removable Coupler section for further instructions. If the damper shaft extends less than 0.79 in.(20mm), install a shaft extension recommended by the damper manufacturer.



Figure 1: Actuator Side A

- Counterclockwise (CCW) Spring Return Direction - Clock wise (CW) Powered Operation

For CCW spring return direction, mount the actuator to the damper shaft so that Side A of the actuator is away from the damper as illustrated in Figure 1. With power applied, the actuator drives CW from the 0° position and spring returns CCW.



Figure 2: Actuator Side B

- Clock wise (CW) Spring Return Direction
- Counterclockwise (CCW) Powered Operation

For CW spring return direction, mount the actuator to the damper shaft so that Side B of the actuator is away from the damper as illustrated in Figure 2. With power applied, the actuator drives CCW from the 0° position and spring returns CW.

Removable Coupler:

If the damper shaft extends less than 3.31 in. (84mm), mount the coupler on the face of the actuator closest to the damper. If the damper shaft extends less than 0.79 in. (20mm), a shaft extension is required to mount the actuator.



Figure 3: Changing the Coupler Position

To change the coupler's position, see Figure 3 and proceed as follows:

1. Mount the coupler on either Side A or Side B of the actuator as determined by the shaft length.

2. Snap the locking clip securely into the coupler retention groove to retain the coupler.

Manual Override:

Use only the supplied manual override crank to reposition the actuator hub when using the manual override feature.

IMPORTANT:

Applying excessive torque to the manual override or operating the manual override with a power tool may damage the internal components of the actuator and cause premature failure.

To reposition the actuator hub, proceed as follows:

- 1. De-energize the actuator.
- 2. Insert the hex end of the manual override crank into the manual override adjustment point on the face of the actuator.
- 3. Rotate the manual override crank in the direction indicated by the arrow on the label.
- 4. The actuator requires 8-1/2 manual override crank rotations from the full spring return position to fully reposition the actuator hub. At the end of travel, the rotation resistance increases. Do not force the manual crank past this point.
- 5. While holding the manual crank in the wound position, rotate and hold the red lock shaft approximately 10° then release the manual crank to lock the actuator hub in place.

NOTE:

Insert and slightly rotate the manual crank in the direction indicated by the arrow on the label to unlock the actuator hub. Alternatively, the actuator hub automatically unlocks when power is applied to the actuator, and returns the actuator to normal drive and spring return operation.

Mounting the Actuator:

To mount the actuator, proceed as follows:

1. See the dimensions in Figure 4 and Table 1 to ensure the correct positioning of the anti-rotation bracket.





Table 1: Dimensions from Anti-Rotation Bracket to Shaft Center

Shaft Diameter,	Dimension A,	Dimension B,
in. (mm)	in. (mm)	in. (mm)
5/16 to 5/8	5-7/16	4-5/32
(8 to 16)	(138.4)	(105.6)
1/2 to 3/4 (12 to 19)	5-13/32 (137.4)	4-1/8 (104.6)

IMPORTANT:

The tab on the anti-rotation bracket must fit midpoint in the actuator slot. Positioning the tab midpoint in the slot prevents actuator binding and premature wear, and makes actuator removal easier.

1. Bend or cut the anti-rotation bracket to fit the damper frame or duct as illustrated in Figure 5

NOTE:

The anti-rotation bracket can be bent to fit a round damper.

- Mark or drill mounting holes in the damper frame or duct using the anti-rotation bracket as a guide (based on the measurements obtained in Table 1 and Figure 4).
- 4. Secure the anti-rotation bracket to the damper frame or duct using the two No. M3.5 x 9.5

IMPORTANT:

Do not overtighten the mounting screws to avoid stripping the threads. Be certain that the tab on the anti-rotation bracket remains properly positioned in the slot on the actuator, and that the actuator remains parallel to the mounting surface.

5.Slide the actuator onto the damper shaft, and position the anti-rotation bracket tab into the slot at the bottom of the actuator as illustrated in Figure 5.



Figure 5: Anti-Rotation Mounting Bracket Positions

To reposition the actuator hub, proceed as follows:

- 6. Rotate the damper blade(s) to the desired position if the power is lost. To ensure a tight seal, insert the manual override crank and turn it in the direction indicated by the arrow. The position indicator should be near the 0° position on the scale. While holding the manual crank in the wound position, rotate and hold the red lock shaft approximately 10° then release the manual crank to temporarily lock the actuator hub in place.
- Hold the actuator perpendicular to the damper shaft. Evenly hand-tighten each nut on the coupler U -bolt, then torque the coupler U -bolt nuts to 100 to 125lb·in.(11 to14 N·m).
- 8. To manually unlock the actuator hub, rotate the manual override crank slightly in the directionindicated by the arrow and remove it. Alternatively, the hub automatically unlocks when power is applied to the actuator.
- Store the manual override crank by applying the 3M DualLock adhesive-backed strip to the manual crank and a convenient surface of the actuator.

 Apply power long enough for the actuator to travel a full stroke. Verify that the actuator rotates freely throughout the range.

NOTE:

If electric power is not available, complete this verification by reinserting the manual override crank and turning it in the direction indicated to rotate the hub to the fully open position.

Limiting Rotation Range Using an Adjustable Stop Kit

The actuator is factory set for 95° rotation, and its range is limited in 5° increments to a minimum of 35°. A strokelimiting stop can be attached in the field to the shaft coupler side of the actuator to reduce the rotation range. Attaching the strokelimiting stop in the furthest mounting position reduces the rotation range of the actuator by 5°. Each progressive mounting position reduces the rotation range an additional 5°.

 Check that the damper blade is visible or its position ispermanently marked on the end of the damper shaft, as illustrated in Figure 6.



Figure 6: Damper Position Icons

- 2. Position the stroke-limiting stop in the serrated slot with its leading edge at the scale position matching the desired stroke.
- 3. The product label marks hole positions for the M3-0.5x8mm self-tapping screw provided with the adjustable stop kit. Drive the screw through the slot in the adjustable stop and into the actuator face over a marked hole position. (See Figure 7.)

NOTE:

The minimum rotation range is 35°.



Figure 7: Limiting Rotation Range

Using Conduit:

All D(M)S24-70 Series Actuators accept 3/8 in. trade size flexible metal conduit.

NOTE:

To convert to a 1/2'' NPT conduit connection a fitting with part number 985-008 will be required.



Figure 8: Adding Flexible Metal Conduit

- 1. Feed the actuator cables through the field supplied conduit.
- 2. Push the conduit into the holes in the actuator and secure it with the supplied $10-32 \times 9/16$ in. screws, as illustrated in Figure 8. The product label marks the position of holes for the screws. Drive the screws through the product label in the marked positions. Drive the screwhead flush with the plate to secure the conduit.

IMPORTANT:

Careful workmanship is required to secure flexible metal conduit. Cut the conduit end perpendicular to its axis. Insert the cut end into the bottom of the holes in the actuator and hold the conduit in place while securing it with the screws provided. Check a completed installation by pulling on the conduit to ensure its retention.

Setup and Adjustments Mode Selection Switch:

Actuators have an external mode selection switch to reverse control logic. The switch is accessible from both A and B sides of the actuator as illustrated in Figure 9. Actuators are delivered in Direct Acting (DA) mode and can be switched by the user to Reverse Acting (RA) mode.



Figure 9: Mode Selection

Control Response:

The installation side of the actuator and the position of the mode selection switch combine to determine control response from the actuator. See Figure 10.

		Installation Side			
				o	
		<u>_</u>	Α	В	<u>O</u> -
Contro	ol Inputs		Mode Sele	ction Swit	ch
GRY	ORN	\bigcirc			
3	4	DA 🔺	A RA	RA À	🔺 DA
CLOSED	OPEN	\frown	\checkmark	\sim	\mathbf{r}
OPEN	CLOSED	\mathbf{r}		\mathbf{r}	$\overline{}$
OPEN	OPEN	STOP	STOP	STOP	STOP
CLOSED	CLOSED		\mathbf{r}		\mathbf{r}

Figure 10: Control Response

Auxiliary Switch (-A Models):

The (-A) models include two integral auxiliary switches with a switch adjuster accessible on either face of the actuator. (See Figure 1 and Figure 2.) The factory setting for Auxiliary Switch No. 1 is 11° closing, and the nominal setting for Auxiliary Switch No. 2 is 81° opening (relative to the 0 to 90° rotation range as printed on the product label). See the Technical Specifications table for the auxiliary switch ratings.

WARNING: Risk of Electric Shock and Property Damage:

Insulate and secure each unused wire lead before applying power to the actuator. Failure to insulate and secure each unused wire lead may result in property damage, electric shock, and severe personal injury or death.

The switch point of Auxiliary Switch No. 1 is fixed. The switch point of Auxiliary Switch No. 2 is independently and continuously adjustable from 25 to 90° position. For the most accurate switch positioning, see Figure 11 and use the method in the following example.

To change the switch point of auxiliary Switch No. 2, proceed as follows:

1. Position the actuator in the full spring return position.

Note: Risk of Electric Shock and Property Damage.

The switch is factory set to trip when the actuator reaches the 81° position.

2.Rotate the switch adjuster until it points to the desired switch point.



Figure 11: Switch Trip Point Settings

- Connect Auxiliary Switch No. 2 to a power source or an ohmmeter and apply power to the actuator. The actuator moves to the fully open position and holds while power is applied.
- 4. Observe the switch point. If required, repeat Step 1 through Step 3.

Repair Information:

A number of replacement parts are available; see Accessories Table 2 for more details. If an D(M)S24-70 Series On/Off and Floating Point Control Electric Spring Return Actuator fails to operate within its specifications, contact the nearest Bray Commercial representative

Accessories:

Code Number	Description		
DMPR-KC003	7 inch- (178 mm-) Blade Pin Extension (without bracket) for specific Direct-Mount Damper Applications (quantity 1)		
M9000-200	Commissioning Tool that provides a control signal to drive 24 V On/Off, Floating, Proportional, and/or Resistive Electric Actuators (quantity 1)		
M9000-321	Weathershield Kit for Damper Application of DS27-70 Series Electric Spring Return Actuators (quantity 1)		
M9000-400	Jackshaft Linkage Kit. Open-ended design enables clamping onto a jackshaft without requiring access to the ends of the jackshaft. (quantity 1)		
M9000-560	Ball Valve Linkage Kit for applying DS24-70 Series Electric Spring Return Actuators to ST2 Series Valves (quantity 1)		
M9000-604	Replacement Anti-Rotation Bracket Kit for Series Electric Spring Return Actuators (quantity 1)		
M9000-606	Position Indicator for Damper Applications of DS24-70 Series Actuators (quantity 5)		
M9200-100	Threaded Conduit Adapter, 1/2 NPSM, for DS24-70 Series Actuators (quantity 5)		
M9208-100	Remote Mounting Kit, including Mounting Bracket, M9208-150 Crankarm, Ball Joint, and mounting fasteners (quantity 1)		
M9208-150	Crankarm Adapter Kit (quantity 1)		
M9208-600	Large Shaft Coupler Kit (with Locking Clip) for Mounting DS24-70 Series Electric Spring Return Actuators on dampers with round shafts from 1/2 to 3/4 in. (12 to 19 mm) or square shafts from 3/8 to 9/16 in. (10 to 14 mm) (quantity 1)		
M9208-601	Replacement Standard Coupler Kit (with Locking Clip) for mounting DS24-70 Series Electric Spring Return Actuators on dampers with round shafts from 5/16 to 5/8 in. (8 to 16 mm) or square shafts from 1/4 to 1/2 in. (6 to 12 mm) (quantity 1)		
M9208-602	Replacement Locking Clips for M9208 Series Electric Spring Return Actuators (quantity 5)		
M9208-603	Adjustable Stop Kit for DS24-70 Series Electric Spring Return Actuators (quantity 1)		
M9208-604	Replacement Manual Override Cranks for DS24-70 Series Electric Spring Return Actuators with long crank radius: 2.83 in. (72 mm) (quantity 5)		
M9208-605	Replacement Manual Override Cranks for DS24-70 Series Electric Spring Return Actuators with short crank radius: 1.83 in. (46.5 mm) (quantity 5)		

Table 2: Accessories and Replacement Parts (Order Separately)

Dimensions:



Wiring:







